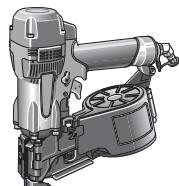
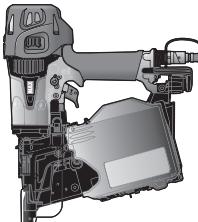


**MAX**

**OPERATING INSTRUCTIONS MANUAL  
MANUEL D'INSTRUCTIONS D'UTILISATION  
MANUAL DE INSTRUCCIONES DE FUNCIONAMIENTO  
BETRIEBSANLEITUNG  
MANUAL DE OPERACIONES Y MANTENIMIENTO**

**HIGH PRESSURE COIL NAILER  
CLOUEUSE À BOBINE HAUTE  
PRESSION  
CLAVADORA DE ALTA PRESIÓN PARA  
CLAVOS EN BOBINA  
HOCHDRUCK-COILNAGLER  
CHIODATRICE A BOBINA AD ALTA  
PRESSIONE**

**HN65(CE)****HN65J(CE)****HN90F**

Original Language English



INDEX	ENGLISH	Page	1 to 4
INDEX	FRANÇAIS	Page	5 à 9
ÍNDICE	ESPAÑOL	Página	10 a 14
INDEX	DEUTSCH	Seite	15 bis 19
INDICE ANALITICO	ITALIANO	Pagine	da 20 a 24

**WARNING** Before using the tool, read and understand tool labels and Safety instruction manual and Operating instructions manual. Failure to follow warnings could result in serious injury.

Keep these instructions with the tool for future reference.

**A AVERTISSEMENT** Veillez à lire et bien comprendre les étiquettes et le Manuel d'instructions sur la sécurité et le Manuel d'instructions d'utilisation avant d'utiliser cet outil. Tout manquement au respect des avertissements peut entraîner des blessures graves.

Conservez ces instructions avec l'outil pour toute consultation ultérieure.

**A ADVERTENCIA** Lea y comprenda las etiquetas, el manual de instrucciones de seguridad y el manual de instrucciones de funcionamiento de la herramienta antes de usarla. El incumplimiento de las advertencias puede provocar lesiones graves.













Conserve estas instrucciones junto con la herramienta para futuras consultas.

**A WARNUNG** Lesen Sie vor der Verwendung des Werkzeugs die Beschriftungen am Werkzeug, die Sicherheitsanleitung und die Betriebsanleitung sorgfältig durch. Das Nichtbefolgen der Warnungen kann zu schweren Verletzungen führen.


Bewahren Sie diese Anweisungen zum späteren Nachschlagen mit dem Werkzeug zusammen auf.

**A AVVERTENZA** Prime di utilizzare l'utensile, leggere e comprendere le etichette e i manuali Istruzioni di sicurezza e Istruzioni per l'uso dell'utensile. La mancata osservanza delle avvertenze potrebbe risultare in gravi lesioni personali.


Conservare queste istruzioni insieme all'utensile per consultazioni future.

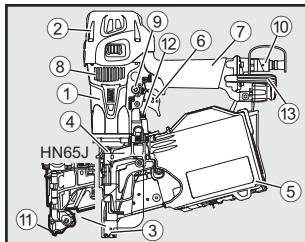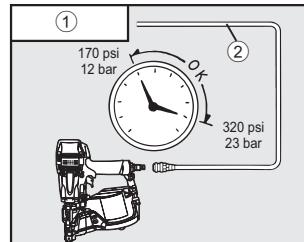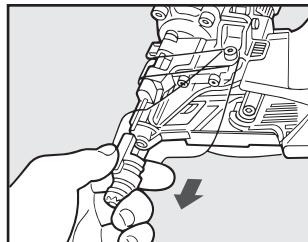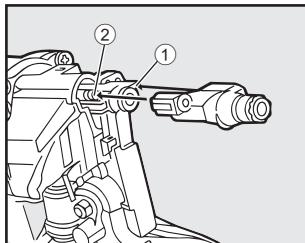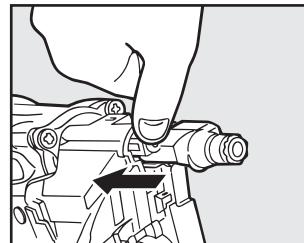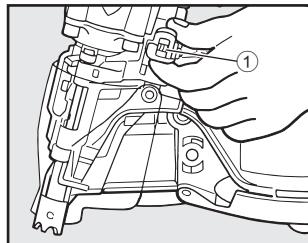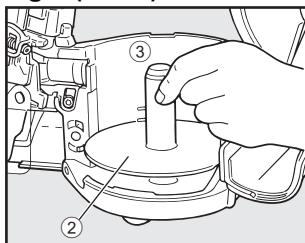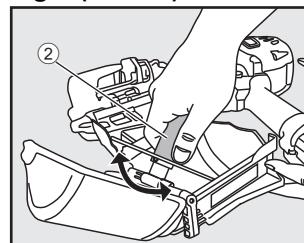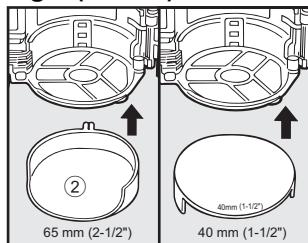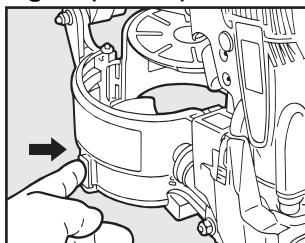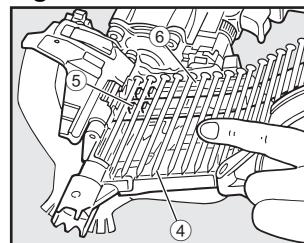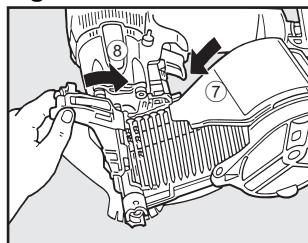**Fig.1****Fig.2****Fig.3 (HN65)****Fig.4 (HN65)****Fig.5 (HN65)****Fig.6****Fig.7 (HN65)****Fig.8 (HN90F)****Fig.9 (HN65J)****Fig.10 (HN65J)****Fig.11****Fig.12**


**Fig.13**

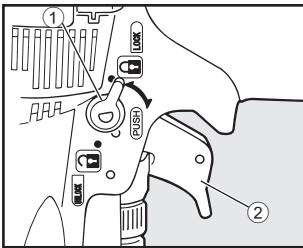


**Fig.14 (HN65, HN90F)**

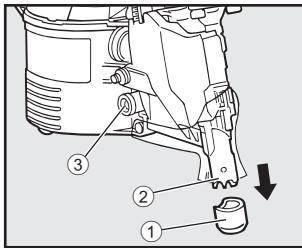


**Fig.15 (HN90F)**

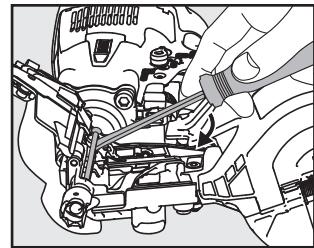


**Fig.16 (HN65J)**

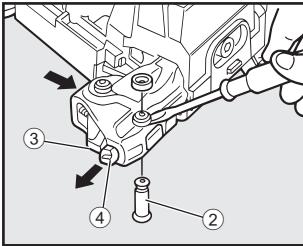

**Fig.17 (HN65J)**

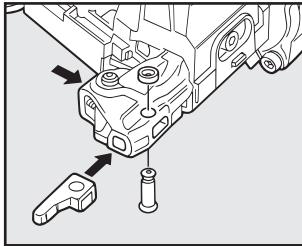

**Fig.18 (HN90F)**

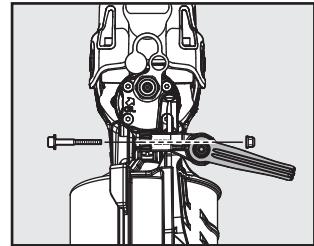

# ENGLISH

## OPERATING INSTRUCTIONS MANUAL

### 1. SPECIFICATIONS AND TECHNICAL DATA

#### 1. NAME OF PARTS (SEE Fig.1)

- |                |                                |
|----------------|--------------------------------|
| ① Frame        | ⑧ Exhaust Cover                |
| ② Cylinder Cap | ⑨ Trigger Lock Dial            |
| ③ Contact Arm  | ⑩ Plug                         |
| ④ Nose         | ⑪ Aiming Guide Locator (HN65J) |
| ⑤ Magazine     | ⑫ Adjust Dial                  |
| ⑥ Trigger      | ⑬ Rafter Hook (HN90F)          |
| ⑦ Grip         |                                |

#### 2. TOOL SPECIFICATIONS

PRODUCT NO.	HN90F	HN65	HN65J
HEIGHT	331mm 13"	301mm 11-7/8"	291mm 11-1/2"
WIDTH	126mm 5"	129mm 5"	102mm 4"
LENGTH	298mm 11-3/4"	291mm 11-1/2"	291mm 11-1/2"
WEIGHT	2.6 kg 5.7 lbs.	1.9 kg 4.3 lbs.	2.0 kg 4.4 lbs.
RECOMMENDED OPERATING PRESSURE	12 to 23 bar 170 to 320 p.s.i.		
LOADING CAPACITY	300 Nails	400 Nails	100 Nails
AIR CONSUMPTION	3.4L at 18 bar / 257 p.s.i. operating pressure	1.7L at 18 bar / 257 p.s.i. operating pressure	1.4L at 18 bar / 257 p.s.i. operating pressure

#### 3. FASTENER SPECIFICATIONS

PRODUCT NO.	HN90F		HN65		HN65J
TYPE OF COLLATION	PLASTIC SHEET COLLATED	WIRE WELDED	PLASTIC SHEET COLLATED	WIRE WELDED	PLASTIC SHEET COLLATED
NAIL LENGTH	45 to 75mm 1-3/4" to 3"	45 to 90mm 1-3/4" to 3-1/2"	32 to 65mm 1-1/4" to 2-1/2"	38 to 65mm 1-1/2" to 2-1/2"	40 to 65mm 1-1/2" to 2-1/2"
SHANK DIAMETER	2.5 to 2.9mm .099" to .114"	2.5 to 3.8mm .099" to .148"	2.5 to 2.9mm .099" to .113"	2.1 to 3.3mm .083" to .131"	3.3 to 4.1mm .131" to .162"
SHANK TYPE	Smooth, Screw	Smooth, Ring, Screw	Smooth, Screw	Smooth, Ring, Screw	Smooth
HEAD DIAMETER	5.5 to 7.7mm .217" to .303"	6.0 to 7.7mm .236" to .303"		5.0 to 7.0mm .197" to .275"	7.2mm .283"

## 4. TECHNICAL DATA

### NOISE

	HN90F	HN65	HN65J
A-weighted single-event sound power level ----- LWA, 1s, d	93.1dB	90.0dB	89.9dB
A-weighted single-event emission sound pressure level at work station----- LpA, 1s, d	81.7dB	85.6dB	86.2dB
Uncertainty		3dB	

These values are determined and documented in accordance to EN12549:1999+A1:2008.

NOTE: These values are tool-related characteristic values and do not represent the noise generation at the point of use. Noise at the point of use will for example depend on the working environment, the workpiece, the workpiece support, and the number of driving operations. In addition, reference should be made to noise reduction measures.

NOTE: Workplace design can also serve to reduce noise levels, for example placing workpieces on sound-damping supports (see also ISO 11690-1).

### VIBRATION

	HN90F	HN65	HN65J
Vibration characteristic value	6.42 m/s <sup>2</sup>	4.13 m/s <sup>2</sup>	4.34 m/s <sup>2</sup>
Uncertainty		1.5 m/s <sup>2</sup>	

These values are determined and documented in accordance to ISO 28927-13

NOTE: The vibration emission value above is a tool-related characteristic value and does not represent the influence to the hand-arm-system when using the tool. Any influence to the hand-arm-system when using the tool will for example depend on the gripping force, the contact pressure force, the working direction, the adjustment of energy supply, the workpiece, the workpiece support.

## 5. APPLICATIONS

HN90F	HN65	HN65J
* Floor and wall framing * Subflooring * Roof and wall sheathing * Fencing	* Floor and wall framing * Subflooring * Roof and wall sheathing * Fencing	* Fastening metal connectors for wood construction.

## 6. ABOUT PRODUCTION YEAR

This product bears production number at the lower part of the grip of the main body. The two digits of the number from left indicates the production year.

(Example)

1 7 8 2 6 0 3 5 D

Year 2017

## 2. AIR SUPPLY AND CONNECTIONS (Fig.2)

### A. HOSES AND SUPPLY SOURCE

WHEN USING THE TOOL, BE SURE TO USE A SPECIAL AIR COMPRESSOR AND AIR HOSE.

In order to improve its performance, it has set its working pressure higher than the conventional nailers. To use the tool, you always need the special air compressor (1) and the air hose (2) (MAX PowerLite Compressor and MAX PowerLite Hose).

Use of high pressure gas (for example, oxygen, acetylene, etc.) causes abnormal combustion, possibly resulting in explosion. Use only the special air compressor and air hose.

### B. OPERATING PRESSURE:

12 to 23 bar / 170 to 320 p.s.i. Select the operating air pressure within this range for best performance based upon the fastener application and work surface. Using the lowest acceptable to minimize noise, vibration and wear.

**⚠ DO NOT EXCEED 23 bar / 320 p.s.i.**

### NOTICE:

Frequent, but not excessive, lubrication is required for the best performance. Upon completion of operations, place 2 or 3 drops of oil into the air plug inlet with the jet oiler.

## 3. INSTRUCTIONS FOR OPERATION

### 1. BEFORE OPERATION

- ① Wear Safety Glasses or Goggles.
- ② Do not connect the air supply.
- ③ Inspect screw tightness.
- ④ Check operation of the contact arm & trigger if moving smoothly.
- ⑤ Connect the air supply.
- ⑥ Check the air-leakage. (The Tool must not have the air-leakage.)
- ⑦ Hold the Tool with finger-off the trigger, then push the contact arm against the work-piece. (The tool must not operate.)
- ⑧ Hold the Tool with contact arm free from work-piece and pull the trigger. (The Tool must not operate.)
- ⑨ Disconnect the air supply.

### 2. OPERATION

#### ATTACHING THE CONTACT NOSE (HN65)

Attach the following contact noses depending on the nail head diameter used.

Head Diameter	Contact Nose	Color
5.0 to 6.0mm (.197" to .236")	Contact Nose S	Black
6.0 to 7.0mm (.236" to .275")	Contact Nose L	Silver

- ① (Fig.3) Pull the contact nose to remove it.
- ② (Fig.4.5) Aligning the rail with the contact arm, press the contact nose as shown in the figure to fit it until it clicks.

#### NAIL LOADING

- ① (Fig.6) Open the Magazine: Pull up Door Latch (1) and swing Door open. Swing Magazine Cap open.
- ② (Fig.7) (HN65) Check adjustment: The Nail Support (2) can be moved up and down to four settings. To change setting pull up on the Nail Post and twist to the correct step. The Nail Support should be adjusted correctly to the position indicated in inches and millimeters inside Magazine (3). (Fig.8) (HN90F)  
The nail support (2) can be moved up and down to four settings. The nail support moves down by turning it counter-clockwise and moves up by turning it clockwise. The nail support should be adjusted correctly to the position indicated in inches and millimeters.

(Fig.9,10) (HN65J) When using 40mm / 1-1/2" nails, attach the nail support (2) in such a manner that a mark "40" can been seen. When using 65mm / 2-1/2" ones, attach the nail support (2) upside down.

To detach, push the latch on the back of the magazine with a finger.

- ③ (Fig.11) Nail loading: Place a coil of nails (4) over the Nail Post in the Magazine. Uncoil enough nails to reach the Feed Pawl (5), and place the second nail between the teeth on the Feed Pawl. The nail heads fit in slot (6) on Nose.
- ④ (Fig.12) Swing Magazine Cap (7) closed.
- ⑤ (Fig.12) Close the Door (8).

Check that Door Latch (1) engages. (If it does not engage, check that the nail heads are in the slot (6) on the Nose).

#### TEST OPERATION

- ① Adjust the air pressure at 170 p.s.i. (12 bar) and connect the air supply.
- ② Without touching the Trigger, depress the Contact Arm against the work-piece. Pull the Trigger. (The tool should fire the fastener.)
- ③ With the tool off the work-piece, pull the Trigger. Then depress the Contact Arm against the work-piece. (Tool with red triggers should fire the fastener, but tool with orange triggers should not.)
- ④ Adjust the air pressure as much as the lowest possible according to the diameters and length of fastener and the hardness of work-piece.

#### DRIVING FASTENERS

HN65J

This tool is assembled with FULL SEQUENTIAL TRIP.



HN65, HN90F

This tool is shipped with CONTACT TRIP WITH ANTI-DOUBLE FIRE MECHANISM selected.

It is the responsibility of employer, tool owner or tool operator to select the appropriate actuation system for the fastener application and training of tool operator before changing the trigger setting.

SWITCHING CONTACT TRIP WITH ANTI-DOUBLE FIRE MECHANISM TO FULL SEQUENTIAL TRIP (Option) (HN90F, HN65)

To change the trigger system, please contact MAX CO., LTD. authorized distributors and have them change the system.

SWITCHING FULL SEQUENTIAL TRIP (Option) TO CONTACT TRIP WITH ANTI-DOUBLE FIRE MECHANISM (HN90F, HN65)  
To change the trigger system, please contact MAX CO., LTD. authorized distributors and have them change the system.

CONTACT FIRE OPERATION (CONTACT TRIP) (HN90F, HN65)

For contact fire operation, pull the Trigger and depress the Contact Arm against the work surface.

SINGLE FIRE OPERATION (ANTI-DOUBLE FIRE MECHANISM) (HN90F, HN65)

For single fire operation, depress the Contact Arm against the work surface and pull trigger. A fastener will be driven. Release trigger. Begin again.

SINGLE FIRE OPERATION (FULL SEQUENTIAL TRIP) (For tool with orange triggers)

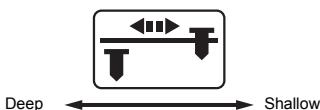
For single fire operation, depress the Contact Arm against work surface and pull trigger. A fastener will be driven. Release both trigger and Contact Arm. Begin again.

	PROCEDURE
CONTACT TRIP WITH ANTI-DOUBLE FIRE MECHANISM	<p>① Pulling the Trigger and keeping it pulled. ② Depressing the Contact Arm.</p> <p>The tool fires a nail each time when the Contact Arm is depressed.</p>
SEQUENTIAL TRIP	The tool cannot fire a nail.

	PROCEDURE
CONTACT TRIP WITH ANTI-DOUBLE FIRE MECHANISM	<p>① Depressing the Contact Arm. ② Pulling the Trigger and keeping it pulled.</p> <p>The tool fires a nail. The tool cannot fire a second nail until the Trigger is released.</p>
SEQUENTIAL TRIP	<p>The tool fires a nail. In order to fire a second nail, you should both release the Trigger and remove the Contact arm from the surface.</p>

#### DRIVING DEPTH ADJUSTMENT DIAL

Adjust the driving depth by twisting the adjustment dial ⑫ as indicated below.



#### TRIGGER LOCK MECHANISM (Fig.13)

This tool has a Trigger Lock. The trigger should be locked at all times until you intend to drive nail into the work surface. Push and rotate the Trigger LOCK Dial ① clockwise from LOCK to UN-LOCK position immediately before driving nails. When fastening is complete, push and rotate switch counterclockwise to LOCK position.

#### CONTACT TIP (Fig.14) (HN90F, HN65)

Attach the Contact Tip ① on the tip of Contact Arm ②, when driving nails to a soft material.

The Contact Tip can be kept on the Arm Cover ③ when not using.

#### REMOVING JAMMED NAILS (Fig.15)

##### WARNING

- **ALWAYS disconnect the air supply.**
- **Wear gloves when removing jams; do not use bare hands**
- **Confirm that you have removed all nails from nose of tool before reconnecting to air supply.**

- ① Disconnect the air supply.
- ② Open the tool door and remove nails from inside of the magazine.
- ③ Insert a thin metal stick in the tool nose and hit the metal stick with a hammer or remove the jam with a flathead screwdriver.
- ④ Put back the nails on the feed pawl and close the tool door.

#### WHEN USING THE TOOL FOR STEEL PLATES

(HN90F, HN65)

(HN65) This tool is exclusively designed for 1.6mm / 16Ga. to 2.3mm / 13Ga. thick light gauge steel.

(HN90F) This tool is exclusively designed for 1.6mm / 16Ga. to 3.2mm / 11Ga. thick light gauge steel.

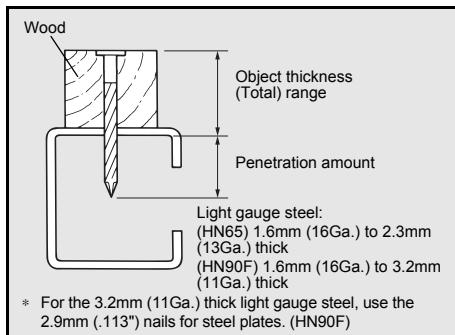
When using it, comply with the Work Standards, considering the object condition and work site environment.

- ① Select appropriate nails according to the object thickness, seeing the Nail Selection Criteria Chart.
- \* The nails may not be driven into the object depending on its hardness or thickness.
- \* If the object is thicker than an appropriate range of thickness, the nails may not be driven into it because of being bent.

- ② If the thickness of the light gauge steel foundations material used is 3.2mm / 11Ga., use the 2.9mm /.113" nails for steel plate. (HN90F)
- ③ Never drive the nails directly into the light gauge steel because they will fly off, endangering you.
- ④ Be sure to apply the discharge outlet to the object at a right angle. If applied obliquely, the nails will fly off, endangering you.
- ⑤ Never use the nails for the roofs (roof foundations included) or ceilings (ceiling foundations included).
- ⑥ If the nails are driven into the steel plate too deeply, their holding force will be extremely reduced. When working with the tool, fully check the driven conditions.

#### Nail Selection Criteria

Tool	Diameter	Length	Object thickness (Total) range	Light gauge steel thickness
HN65 HN90F	2.5mm (.098")	45mm (1-3/4")	25 to 35mm (1" to 1-3/8")	1.6 to 2.3mm (16Ga. to 13Ga.)
		50mm (2")	30 to 40mm (1-1/8" to 1-1/2")	
		57mm (2-1/4")	35 to 45mm (1-3/8" to 1-3/4")	
		65mm (2-1/2")	45 to 55mm (1-1/2" to 1-1/8")	
HN90F	2.9mm (.113")	45mm (1-3/4")	25 to 35mm (1" to 1-3/8")	1.6 to 3.2mm (16Ga. to 11Ga.)
		50mm (2")	30 to 40mm (1-1/8" to 1-1/2")	
		57mm (2-1/4")	35 to 45mm (1-3/8" to 1-3/4")	
		65mm (2-1/2")	45 to 55mm (1-1/2" to 1-1/8")	



#### REPLACING THE AIMING GUIDE LOCATOR (HN65J)

The aiming guide locator is worn out depending on the frequency of use.

If the machine cannot be easily held vertically when setting the aiming guide locator in a hole in a metal fitting, it is about time to replace.

Replace it in the following procedure:

- ① (Fig.16) Remove a rubber washer ① with a regular screwdriver to pull out a pin ②. Push the nail leg guide ③ to remove the aiming guide locator ④.
- ② (Fig.17) Attach a new aiming guide locator, set the pin and put back the rubber washer.

When replacing the aiming guide locator, contact the nearest MAX CO., LTD. authorized distributor.

#### CHANGING THE HOOK DIRECTION (HN90F)

(Fig.18) The hook can be directed in the two direction. Remove the hexagon socket cap screw with hexagon wrench, change the direction, and then, put back the bolt to reassemble.

# HN65(CE)

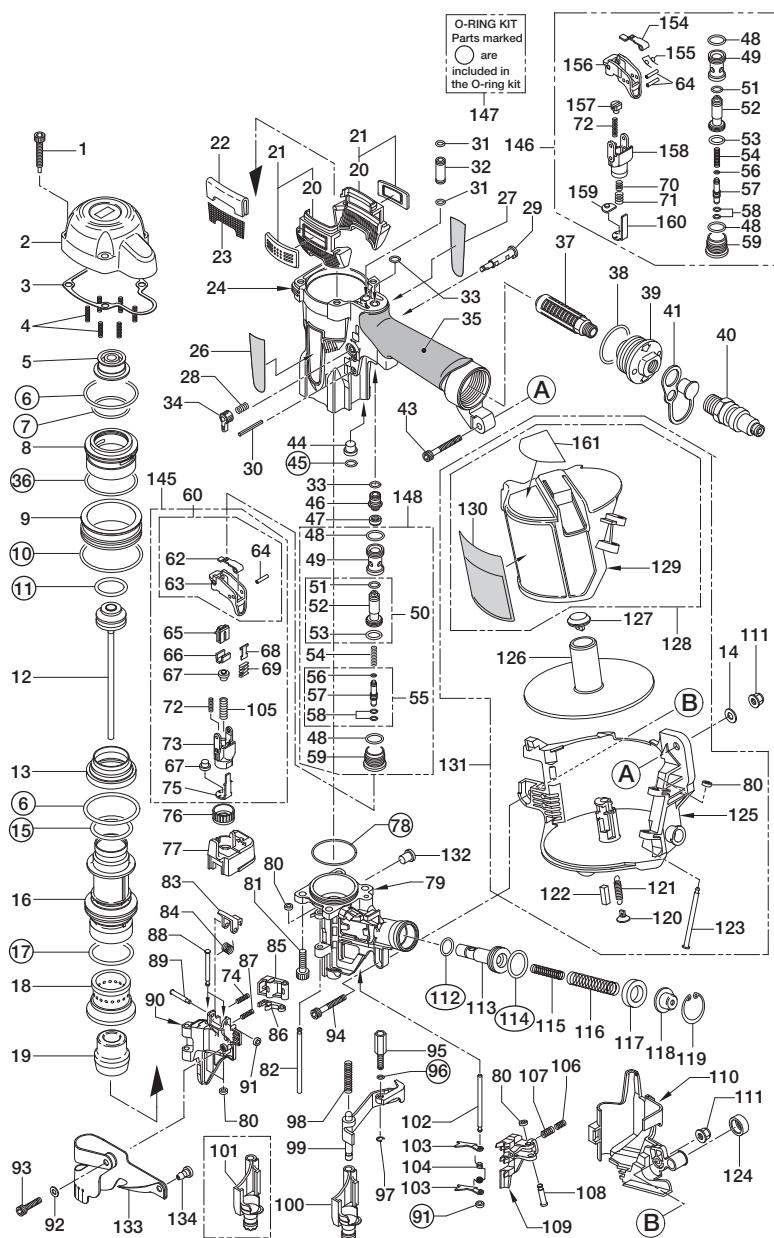
EXPLODED  
VIEW AND SPARE  
PARTS LIST

SCHEMA ECLATE ET  
LISTE DES PIECES  
DE RECHANGE

DESPIECE DE LA  
MAQUINA Y LISTA  
DE RECAMBIOS

EINZELTEILDAR-  
STELLUNG UND  
ERSATZTEILLISTE

ESPLOSO DEI  
COMPONENTI ED  
ELENCO DELLE  
PARTI DI RICAMBIO



**HN65(CE)**

ITEM NO.	PART NO.	MATERIAL	ENGLISH	FRANÇAIS	ESPAÑOL	DEUTSCH	ITALIANO
1	HN10338	Steel	SCREW 5X36	VIS 5X36	TORNILLO 5X36	SCHRAUBE 5X36	VITE 5X36
2	HN11467	Aluminum	CYLINDER CAP	CAPUCHON DE CYLINDRE	ATAPE DEL CILINDRO	ZYLINDERDECKEL	CALOTTA CILINDRO
3	HN11363	Steel, Rubber	CYLINDER CAP SEAL	JOINT DE CAPUCHON DE CYLINDRE	JUNTA ESTANCA DE TAPA DEL CILINDRO	ZYLINDERDECKEL-DICHTUNG	GUARNIZIONE CALOTTA CILINDRO
4	KK23650	Steel	COMPRESSION SPRING 3650	RESSORT À PRESSION 3650	MUELLE DE COMPRESIÓN 3650	DRUCKFEDER 3650	MOLLA DI COMPRESSIONE 3650
5	HN11364	Rubber	PISTON STOP	BUTÉE DE PISTON	TOPE DEL PISTÓN	KOLBENANSCHLAG	ARRESTO PISTONE
6	HH11136	Rubber	O-RING AS568-132	JOINT TORIQUE AS568-132	JUNTA TÓRICA AS568-132	O-RING AS568-132	GUARNIZIONE CIRCOLARE AS568-132
7	HH19752	Rubber	O-RING 1A 2X31.5	JOINT TORIQUE 1A 2X31.5	JUNTA TÓRICA 1A 2X31.5	O-RING 1A 2X31.5	GUARNIZIONE CIRCOLARE 1A 2X31.5
8	HN11396	Polyacetal	HEAD VALVE PISTON	PISTON DE DISTRIBUTEUR AVANT	PISTÓN DE VÁLVULA DE IMPULSIÓN	DRUCKVENTILKOLBEN	PISTONE VALVOLA DI TESTA
9	HN11367	Aluminum	HEAD VALVE GUIDE	GUIDE DE DISTRIBUTEUR AVANT	GUÍA DE VÁLVULA DE IMPULSIÓN	DRUCKVENTILFÜHRUNG	GUIDA VALVOLA DI TESTA
10	HH14904	Rubber	O-RING AS568-032	JOINT TORIQUE AS568-032	JUNTA TÓRICA AS568-032	O-RING AS568-032	GUARNIZIONE CIRCOLARE AS568-032
11	HH11805	Rubber	O-RING P22A	JOINT TORIQUE P22A	JUNTA TÓRICA P22A	O-RING P22A	GUARNIZIONE CIRCOLARE P22A
12	HN70108	Magnesium, Steel	MAIN PISTON UNIT	PISTON PRINCIPAL	PISTÓN PRINCIPAL	HAUPTKOLBENEINHEIT	UNITÀ PISTONE PRINCIPALE
13	HN11370	Rubber	CYLINDER SEAL	JOINT DE CYLINDRE	JUNTA ESTANCA DEL CILINDRO	ZYLINDERDICHTUNG	GUARNIZIONE CILINDRO
14	EE31105	Steel	PLANE WASHER 1-6	RONDALLE PLATE 1-6	ARANDELA 1-6	UNTERLEGSCHEIBE 1-6	RONDELLA PIANA 1-6
15	HH11135	Rubber	O-RING 1A P31.5	JOINT TORIQUE 1A P31.5	JUNTA TÓRICA 1A P31.5	O-RING 1A P31.5	GUARNIZIONE CIRCOLARE 1A P31.5
16	HN81140	Aluminum	CYLINDER A	CYLINDRE A	CILINDRO "A"	ZYLINDER A	CILINDRO "A"
17	HH11174	Rubber	O-RING 1A P35	JOINT TORIQUE 1A P35	JUNTA TÓRICA 1A P35	O-RING 1A P35	GUARNIZIONE CIRCOLARE 1A P35
18	HN11369	Aluminum	CYLINDER B	CYLINDRE B	CILINDRO "B"	ZYLINDER B	CILINDRO "B"
19	HN11384	Rubber	BUMPER	AMORTISSEUR	AMORTIGUADOR	STOSSDÄMPFER	AMMORTIZZATORE
20	HN11374	Nylon	EXHAUST COVER	CAPOT DE L'ÉCHAPPEMENT	CUBIERTA DE ESCAPE	ABLUFTGITTER	COPERTURA SCARICO
21	HN81086	Nylon, Rubber	EXHAUST COVER UNIT	UNITÉ DU CAPOT DE L'ÉCHAPPEMENT	UNIDAD DE CUBIERTA DE ESCAPE	ABLUFTGITTER-EINHEIT	UNITÀ COPERTURA SCARICO
22	HN11376	Polyester	FILTER B	FILTRE B	FILTRO "B"	FILTER B	FILTRO "B"
23	HN11375	Stainless steel	FILTER A	FILTRE A	FILTRO "A"	FILTER A	FILTRO "A"
24	HN11361	Magnesium	FRAME	CHÂSSIS	ARMAZÓN	GEHAUSE	TELAI
26	HN10810	Polyethylene terephthalate	NAME LABEL A	ÉTIQUETTE NOMINATIVE A	ETIQUETA DE NOMBRE "A"	NAMENSSCHILD A	ETICHETTA NOME "A"
27	HN10811	Polyethylene terephthalate	NAME LABEL B	ÉTIQUETTE NOMINATIVE B	ETIQUETA DE NOMBRE "B"	NAMENSSCHILD B	ETICHETTA NOME "B"
28	KK23507	Steel	COMPRESSION SPRING 3507	RESSORT À PRESSION 3507	MUELLE DE COMPRESIÓN 3507	DRUCKFEDER 3507	MOLLA DI COMPRESSIONE 3507
29	CN35075	Nylon	TRIGGER LOCK LEVER	LEVIER DE BLOCAGE DE LA COMMANDE	PALANCA DE SEGURO DEL DISPARADOR	AUSLÖSESPERRHEBEL	LEVA DI BLOCCO DEL GRILLETTO
30	FF21235	Steel	ROLL PIN 3X30	GOUPILLE ÉLASTIQUE 3X30	PASADOR DE RODILLO 3X30	SPANNSTIFT 3X30	PERNO ROTANTE 3X30
31	HH11120	Rubber	O-RING AS568-009	JOINT TORIQUE AS568-009	JUNTA TÓRICA AS568-009	O-RING AS568-009	GUARNIZIONE CIRCOLARE AS568-009
32	HN11442	Aluminum	PIPE	TUBE	TUBO	ROHR	TUBO
33	HH19127	Rubber	O-RING 1A 1.5X6.6	JOINT TORIQUE 1A 1.5X6.6	JUNTA TÓRICA 1A 1.5X6.6	O-RING 1A 1.5X6.6	GUARNIZIONE CIRCOLARE 1A 1.5X6.6
34	CN35074	Polyacetal	TRIGGER LOCK DIAL	MOLETTE DE BLOCAGE DE LA COMMANDE	DISCO DE BLOQUEO DEL DISPARADOR	AUSLÖSESPERRER-EINSTELLRAD	MANOPOLA DI BLOCCO DEL GRILLETTO
35	HN10379	Rubber	GRIP COVER	REVÊTEMENT DE LA POIGNÉE	CUBIERTA DE EMPUÑADURA	GRIFFÜBERZUG	COPERTURA IMPUGNATURA
36	HH14906	Rubber	O-RING AS568-133	JOINT TORIQUE AS568-133	JUNTA TÓRICA AS568-133	O-RING AS568-133	GUARNIZIONE CIRCOLARE AS568-133
37	TA17024	Polyacetal, Polyethylene	END CAP FILTER KM-23	FILTRE DU CAPUCHON D'EXTREMITÉ KM-23	FILTRO DE TAPÓN TERMINAL KM-23	ENDKAPPENFILTER KM-23	FILTRO PEZZO DI CHIUSURA FINALE KM-23
38	HH19102	Rubber	O-RING 1A 2.4X31.8	JOINT TORIQUE 1A 2.4X31.8	JUNTA TÓRICA 1A 2.4X31.8	O-RING 1A 2.4X31.8	GUARNIZIONE CIRCOLARE 1A 2.4X31.8
39	HN12037	Aluminum	END CAP	CAPUCHON D'EXTREMITÉ	TAPÓN TERMINAL	ENDKAPPE	PEZZO DI CHIUSURA FINALE
40	TT05416	Steel, Rubber	AIR PLUG	PRISE D'AIR	TOMA DE AIRE	LUFTSTECKER	INNESTO RAPIDO ARIA

## HN65(CE)

ITEM NO.	PART NO.	MATERIAL	ENGLISH	FRANÇAIS	ESPAÑOL	DEUTSCH	ITALIANO
41	HN10316	Rubber	END PLUG CAP	CAPUCHON DE LA PRISE D'EXTREMITÉ	TAPÓN TERMINAL DE TOMA	ENDKAPPENSTOPFEN	TAPPO DI CHIUSURA FINALE
42							
43	BB40437	Steel	SCREW 5X30	VIS 5X30	TORNILLO 5X30	SCHRAUBE 5X30	VITE 5X30
44	HN10820	Aluminum	FEED NOZZLE	BUSE DE CHARGEMENT	BOQUILLA DE ALIMENTACIÓN	EINFÜLLSTUTZEN	UGELLO DI ALIMENTAZIONE
45	HH19722	Rubber	O-RING 1A 1.5X5	JOINT TORIQUE 1A 1,5X5	JUNTA TÓRICA 1A 1,5X5	O-RING 1A 1,5X5	GUARNIZIONE CIRCOLARE 1A 1,5X5
46	HN10043	Steel	PILOT CAP	CAPUCHON PILOTE	TAPÓN PILOTO	PILOTKAPPE	PEZZO DI CHIUSURA PILOTA
47	HN10018	Rubber	PILOT SEAL	JOINT PILOTE	JUNTA ESTANCA PILOTO	PILOTDICHTUNG	GUARNIZIONE PILOTA
48	HH12105	Rubber	O-RING 1A 1.5X12.8	JOINT TORIQUE 1A 1.5X12,8	JUNTA TÓRICA 1A 1.5X12,8	O-RING 1A 1,5X12,8	GUARNIZIONE CIRCOLARE 1A 1.5X12,8
49	HN10016	Polyacetal	TRIGGER VALVE HOUSING	LOGEMENT DE LA VALVE DE DÉCLENCHEMENT	CARCASA DE VÁLVULA DEL DISPARADOR	AUSLÖSEVENTIL-GEHÄUSE	ALLOGGIAMENTO VALVOLA GRILLETTO
50	HN81098	Polyacetal, Rubber	PILOT VALVE ASSY	ENSEMBLE DU DISTRIBUTEUR PILOTE	CONJUNTO DE VÁLVULA PILOTO	PILOTVENTIL-BAUGRUPPE	GRUPPO VALVOLA PILOTA
51	HH11208	Rubber	O-RING 1B P6	JOINT TORIQUE 1B P6	JUNTA TÓRICA 1B P6	O-RING 1B P6	GUARNIZIONE CIRCOLARE 1B P6
52	HN10017	Polyacetal	PILOT VALVE	DISTRIBUTEUR PILOTE	VÁLVULA PILOTO	PILOTVENTIL	VALVOLA PILOTA
53	HH11132	Rubber	O-RING 1A P10A	JOINT TORIQUE 1A P10A	JUNTA TÓRICA 1A P10A	O-RING 1A P10A	GUARNIZIONE CIRCOLARE 1A P10A
54	KK23619	Steel	COMPRESSION SPRING 3619	RESSORT À PRESSION 3619	MUELLE DE COMPRESIÓN 3619	DRUCKFEDER 3619	MOLLA DI COMPRESSIONE 3619
55	HN81311	Steel, Polyacetal, Rubber	TRIGGER VALVE STEM ASSY	ENSEMBLE DE TIGE DE MANŒUVRE DU DÉCLENCHEUR	CONJUNTO DE VÁSTAGO DE VÁLVULA DEL DISPARADOR	AUSLÖSEVENTILSCHAFT-BAUGRUPPE	GRUPPO STELO VALVOLA GRILLETTO
56	HH19707	Rubber	O-RING 1A 1.4X2.5	JOINT TORIQUE 1A 1,4X2,5	JUNTA TÓRICA 1A 1,4X2,5	O-RING 1A 1,4X2,5	GUARNIZIONE CIRCOLARE 1A 1,4X2,5
57	HN10353	Steel, Rubber	TRIGGER VALVE STEM	TIGE DE MANŒUVRE DU DÉCLENCHEUR	VÁSTAGO DE VÁLVULA DEL DISPARADOR	AUSLÖSEVENTILSCHAFT	STENO VALVOLA GRILLETTO
58	HH19214	Rubber	O-RING 1B 1.5X3	JOINT TORIQUE 1B 1,5X3	JUNTA TÓRICA 1B 1,5X3	O-RING 1B 1,5X3	GUARNIZIONE CIRCOLARE 1B 1,5X3
59	HN10019	Steel	TRIGGER VALVE CAP	CAPUCHON DE LA VALVE DU DÉCLENCHEUR	TAPÓN DE VÁLVULA DEL DISPARADOR	AUSLÖSEVENTILKAPPE	CAPPELLETTO VALVOLA GRILLETTO
60	HN80077	Steel, Polyacetal, Rubber	TRIGGER ASSY	ENSEMBLE DU DÉCLENCHEUR	CONJUNTO DE DISPARADOR	AUSLÖSER-BAUGRUPPE	GRUPPO GRILLETTO
62	CN35115	Steel	CONTACT LEVER A	LEVIER À CONTACT A	PALANCA DE CONTACTO "A"	KONTAKTHEBEL A	LEVA DI CONTATTO "A"
63	HS10147	Polyacetal	TRIGGER	DÉCLENCHEUR	DISPARADOR	AUSLÖSER	GRILLETTO
64	FF22402	Stainless steel	ROLL PIN 3X16	GOUPILE ÉLASTIQUE 3X16	PASADOR DE RODILLO 3X16	SPANNSTIFT 3X16	PERNO ROTANTE 3X16
65	HN11399	Nylon	SWITCH LEVER A	LEVIER DE COMMUTATEUR A	PALANCA CONMUTADORA "A"	SCHALTHERBET A	LEVA INTERRUTTORE "A"
66	HN10786	Stainless steel	ARM GUIDE PLATE	PLAQUE GUIDE DU BRAS	PLACA DE GUÍA DEL BRAZO	ARMLIEITBLECH	PIASTRA GUIDA BRACCIO
67	HN10785	Rubber	CONTACT BUMPER	AMORTISSEUR DE CONTACT	AMORTIGUADOR DE CONTACTO	KONTAKTSTOSSFÄNGER	AMMORTIZZATORE CONTATTO
68	HS10146	Steel	SWITCH LEVER B	LEVIER DE COMMUTATEUR B	PALANCA CONMUTADORA "B"	SCHALTHERBET B	LEVA INTERRUTTORE "B"
69	CN34500	Steel	SWITCH SPRING	RESSORT DU COMMUTATEUR	MUELLE CONMUTADOR	SCHALTFEDER	MOLLA INTERRUTTORE
70	KK23735	Steel	COMPRESSION SPRING 3735	RESSORT À PRESSION 3735	MUELLE DE COMPRESIÓN 3735	DRUCKFEDER 3735	MOLLA DI COMPRESSIONE 3735
71	KK23736	Steel	COMPRESSION SPRING 3736	RESSORT À PRESSION 3736	MUELLE DE COMPRESIÓN 3736	DRUCKFEDER 3736	MOLLA DI COMPRESSIONE 3736
72	KK23129	Steel	COMPRESSION SPRING 3129	RESSORT À PRESSION 3129	MUELLE DE COMPRESIÓN 3129	DRUCKFEDER 3129	MOLLA DI COMPRESSIONE 3129
73	HN10784	Nylon	ARM GUIDE	GUIDE DU BRAS	GUÍA DEL BRAZO	ARMFÜHRUNG	GUIDA BRACCIO
74	KK23912	Steel	COMPRESSION SPRING 3912	RESSORT À PRESSION 3912	MUELLE DE COMPRESIÓN 3912	DRUCKFEDER 3912	MOLLA DI COMPRESSIONE 3912
75	HN10356	Steel	CONTACT ARM A	BRAS DE CONTACT A	BRAZO DE CONTACTO "A"	KONTAKTARM A	BRACCIO DI CONTATTO "A"
76	HN10026	Polyacetal	ADJUST DIAL	MOLETTE DE RÉGLAGE	DISCO DE AJUSTE	EINSTELLRAD	MANOPOLA DI REGOLAZIONE
77	HN11389	Nylon	ADJUST SPACER	ENTRETOISE D'AJUSTEMENT	ESPACIADOR DE AJUSTE	EINSTELLABSTANDS-HALTER	DISTANZIATORE DI REGOLAZIONE
78	HH14164	Rubber	O-RING AS 568-030	JOINT TORIQUE AS 568-030	JUNTA TÓRICA AS 568-030	O-RING AS 568-030	GUARNIZIONE CIRCOLARE AS 568-030

## HN65(CE)

ITEM NO.	PART NO.	MATERIAL	ENGLISH	FRANÇAIS	ESPAÑOL	DEUTSCH	ITALIANO
79	HN11380	Steel	NOSE	BUSE	NARIZ	NASE	PUNTA
80	EE39602	Rubber	RUBBER WASHER 7	RONDELLE DE CAOUTCHOUC 7	ARANDELA DE CAUCHO 7	GUMMISCHEIBE 7	RONDELLA DI GOMMA 7
81	BB40213	Steel	SCREW 6X25	VIS 6X25	TORNILLO 6X25	SCHRAUBE 6X25	VITE 6X25
82	FF31250	Steel	PARALLEL PIN 1250	GOUPILLE PARALLÈLE 1250	PERNO PARALELO 1250	ZYLINDERSTIFT 1250	PERNO PARALELO 1250
83	CN33679	Steel	DOOR LATCH	VERROU DE PORTE	CIERRE DE PUERTA	KLAPPENVERSCHLUSS	DISPOSITIVO DI CHIUSURA SPORTELLINO
84	KK3353	Steel	TORSION SPRING 3353	RESSORT DE TORSION 3353	MUELLE DE TORSIÓN 3353	TORSIONSFEDER 3353	MOLLA DI TORSIONE 3353
85	HN11463	Steel	RATCHET A	CLIQUET A	TRINQUETE "A"	SPERRKLINKE A	ROCCHETO "A"
86	CN34479	Steel	RATCHET B	CLIQUET B	TRINQUETE "B"	SPERRKLINKE B	ROCCHETO "B"
87	KK23282	Steel	COMPRESSION SPRING 3282	RESSORT À PRÉSSION 3282	MUELLE DE COMPRESIÓN 3282	DRUCKFEDER 3282	MOLLA DI COMPRESSIONE 3282
88	FF41281	Steel	STEP PIN 1281	BOULON À GRADINS 1281	PERNO ESCALONADO 1281	STUFENBOLZEN 1281	PERNO SCALARLE 1281
89	FF41599	Steel	STEP PIN 1599	BOULON À GRADINS 1599	PERNO ESCALONADO 1599	STUFENBOLZEN 1599	PERNO SCALARLE 1599
90	HN11382	Steel	DOOR	PORTE	PUERTA	KLAPPE	SPORTELLINO
91	EE39609	Rubber	RUBBER WASHER 1.8X6X2	RONDELLE DE CAOUTCHOUC 1.8X6X2	ARANDELA DE CAUCHO 1.8X6X2	GUMMISCHEIBE 1.8X6X2	RONDELLA IN GOMMA 1.8X6X2
92	EE39172	Steel	PLANE WASHER 5.1X12X1.2	RONDELLE PLATE 5.1X12X1.2	ARANDELA 5.1X12X1.2	UNTERLEGSCHEIBE 5.1X12X1.2	RONDELLA PIANA 5.1X12X1.2
93	BB40427	Steel	SCREW 4X8	VIS 4X8	TORNILLO 4X8	SCHRAUBE 4X8	VITE 4X8
94	BB40407	Steel	SCREW 5X20	VIS 5X20	TORNILLO 5X20	SCHRAUBE 5X20	VITE 5X20
95	HN12405	Steel	CONTACT BOLT	BOULON DE CONTACT	PERNO DE CONTACTO	KONTAKTBOLZEN	BULLONE DI CONTATTO
96	HH11903	Rubber	O-RING 1A 1.2X4	JOINT TORIQUE 1A 1.2X4	JUNTA TÓRICA 1A 1.2X4	O-RING 1A 1.2X4	GUARNIZIONE CIRCOLARE 1A 1.2X4
97	JJ80010	Steel	U-RETAINING RING 3.2	BAGUE-U DE RETENUE 3.2	ANILLO DE RETENCIÓN EN "U" 3.2	U-HALTERING 3,2	ANELLO DI FISSAGGIO A "U" 3.2
98	KK29136	Steel	COMPRESSION SPRING 3952	RESSORT À PRÉSSION 3952	MUELLE DE COMPRESIÓN 3952	DRUCKFEDER 3952	MOLLA DI COMPRESSIONE 3952
99	HN70111	Steel	CONTACT ARM B UNIT	UNITÉ DU BRAS DE CONTACT B	BRAZO DE CONTACTO "B"	KONTAKTARM-EINHEIT B	UNITÀ BRACCIO DI CONTATTO "B"
100	HN81108	Steel, Rubber	CONTACT NOSE L ASSY	ENSEMBLE DE LA BUSE DE CONTACT L	CONJUNTO DE NARIZ DE CONTACTO "L"	KONTAKTNASE-BAUGRUPPE L	GRUPPO PUNTA DI CONTATTO "L"
101	HN81107	Steel, Rubber	CONTACT NOSE S ASSY	ENSEMBLE DE LA BUSE DE CONTACT S	CONJUNTO DE NARIZ DE CONTACTO "S"	KONTAKTNASE-BAUGRUPPE S	GRUPPO PUNTA DI CONTATTO "S"
102	FF31602	Steel	PARALLEL PIN 1602	GOUPILLE PARALLÈLE 1602	PERNO PARALELO 1602	ZYLINDERSTIFT 1602	PERNO PARALELO 1602
103	HN11984	Steel	CHECK PAWL	CLIQUET D'ARRÊT	TRINQUETE DE RETENCIÓN	PRÜFKLINKE	NOTTOLINO DI CONTROLLO
104	KK33221	Steel	TORSION SPRING 3221	RESSORT DE TORSION 3221	MUELLE DE TORSIÓN 3221	TORSIONSFEDER 3221	MOLLA DI TORSIONE 3221
105	KK23653	Steel	COMPRESSION SPRING 3653	RESSORT À PRÉSSION 3653	MUELLE DE COMPRESIÓN 3653	DRUCKFEDER 3653	MOLLA DI COMPRESSIONE 3653
106	KK23788	Steel	COMPRESSION SPRING 3788	RESSORT À PRÉSSION 3788	MUELLE DE COMPRESIÓN 3788	DRUCKFEDER 3788	MOLLA DI COMPRESSIONE 3788
107	KK23710	Steel	COMPRESSION SPRING 3710	RESSORT À PRÉSSION 3710	MUELLE DE COMPRESIÓN 3710	DRUCKFEDER 3710	MOLLA DI COMPRESSIONE 3710
108	FF41817	Steel	STEP PIN 1817	BOULON À GRADINS 1817	PERNO ESCALONADO 1817	STUFENBOLZEN 1817	PERNO SCALARLE 1817
109	HN11462	Steel	FEED PAWL	CLIQUET D'ALIMENTATION	TRINQUETE DE AVANCE	VORSCHUBKLINKE	NOTTOLINO DI ALIMENTAZIONE
110	HN11385	Nylon	ARM COVER	CAPOT DU BRAS	CUBIERTA DE BRAZO	ARMABDECKUNG	COPERTURA BRACCIO
111	CC00401	Steel	HEX NUT M5	ÉCROU HEXAGONAL M5	TUERCA HEXAGONAL M5	SECHSKANTMUTTER M5	DADO ESAGONALE M5
112	HH11113	Rubber	O-RING 1A P9	JOINT TORIQUE 1A P9	JUNTA TÓRICA 1A P9	O-RING 1A P9	GUARNIZIONE CIRCOLARE 1A P9
113	HN11390	Steel	FEED PISTON	PISTON D'ALIMENTATION	PISTÓN DE AVANCE	VORSCHUBKOLBEN	PISTONE DI ALIMENTAZIONE
114	HH11106	Rubber	O-RING 1A P16	JOINT TORIQUE 1A P16	JUNTA TÓRICA 1A P16	O-RING 1A P16	GUARNIZIONE CIRCOLARE 1A P16
115	KK23724	Steel	COMPRESSION SPRING 3724	RESSORT À PRÉSSION 3724	MUELLE DE COMPRESIÓN 3724	DRUCKFEDER 3724	MOLLA DI COMPRESSIONE 3724
116	KK23173	Steel	COMPRESSION SPRING 3173	RESSORT À PRÉSSION 3173	MUELLE DE COMPRESIÓN 3173	DRUCKFEDER 3173	MOLLA DI COMPRESSIONE 3173
117	CN37998	Rubber	FEED PISTON STOP	ARRÊT DU PISTON D'ALIMENTATION	TOPE DE PISTÓN DE AVANCE	VORSCHUBKOLBEN-ANSCHLAG	ARRESTO PISTONE DI ALIMENTAZIONE

## HN65(CE)

ITEM NO.	PART NO.	MATERIAL	ENGLISH	FRANÇAIS	ESPAÑOL	DEUTSCH	ITALIANO
118	CN35285	Steel	SPRING COLLAR	COLLIER A RESSORT	COLLARÍN DE MUELLE	FEDERTELLER	COLLARE MOLLA
119	JJ22408	Stainless steel	C-RETAINING RING 24 SUS	C-BAGUE DE RETENUE 24 SUS	ANILLO DE RETENCIÓN EN "C" 24 SUS	C-HALTERING 24 SUS	ANELLO DI FISSAGGIO A "C" 24 SUS
120	CN37383	Nylon	SPRING HOOK	CROCHET À RESSORT	GANCHO DE MUELLE	FEDERHAKEN	GANCIO MOLLA
121	KK13051	Steel	TENSION SPRING 3051	RESSORT DE TENSION 3051	MUELLE TENSOR 3051	ZUGFEDER 3051	MOLLA DI TENSIONAMENTO 3051
122	CN30601	Rubber	VIBRATION-PROOF BLOCK	BLOC ANTIVIBRATION	BLOQUE ANTIVIBRACIÓN	VIBRATIONS-BESTÄNDIGER BLOCK	BLOCCO A PROVA DI VIBRAZIONI
123	FF41287	Steel	STEP PIN 1287	BOULON À GRADINS 1287	PERNO ESCALONADO 1287	STUFENBOLZEN 1287	PERNO SCALARE 1287
124	HN10805	Rubber	CONTACT TIP	EXTRÉMITÉ DE CONTACT	PUNTA DE CONTACTO	KONTAKTSPITZE	PUNTA DI CONTATTO
125	CN35388	Nylon	MAZAGINE	MAGASIN	CARGADOR	MAGAZIN	CARICATORE
126	HN10389	Polyacetal	NAIL SUPPORT	SUPPORT À CLOUS	SOPORTE DE CLAVOS	NAGELTRÄGER	SUPPORTO CHIODI
127	CN37428	Nylon	POST CAP	CAPUCHON AVANT	TAPA DEL POSTE	PFOSTENKAPPE	CAPPUCIO COLONNINA
128	HN81401	Polyethylene terephthalate	MAZAGINE CAP ASSY	ENSEMBLE DU CAPOT DU MAGASIN	CONJUNTO DE TAPA DEL CARGADOR	MAGAZINKAPPEN-BAUGRUPPE	GRUPPO COPERCHIO CARICATORE
129	CN35651	Nylon	MAZAGINE CAP	COUVERCLE DU MAGASIN	TAPA DEL CARGADOR	MAGAZINKAPPE	COPERCHIO CARICATORE
130	HN12403	Polyethylene terephthalate	WARNING LABEL	ÉTIQUETTE D'AVERTISSEMENT	ETIQUETA DE ADVERTENCIA	WARNSCHILD	TARGHETTA DI AVVERTENZA
131	HN81059		MAZAGINE ASSY	ENSEMBLE DU MAGASIN	CONJUNTO DE CARGADOR	MAGAZINBAUGRUPPE	GRUPPO CARICATORE
132	HN81013	Brass	MAGNET ASSY	ENSEMBLE MAGNÉTIQUE	IMÁN	MAGNETBAUGRUPPE	GRUPPO MAGNETE
133	HN11386	Polyvinyl Chloride	DUST COVER	CAPOT ANTIPOUSSIÈRE	CUBIERTA ANTIPOVLO	STAUBABDECKUNG	PROTEZIONE ANTIPOLVERE
134	CN31083	Rubber	DUST COVER FITTING	FIXATION DU CAPOT ANTIPOUSSIÈRE	ELEMENTO DE FIJACIÓN DE CUBIERTA ANTIPOLVO	STAUBABDECKUNG-VERBINDUNGSSTÜCK	RACCORDO PROTEZIONE ANTIPOLVERE
145	HN81402		ARM GUIDE KIT	KIT GUIDE DU BRAS	KIT DE GUÍA DEL BRAZO	ARMFÜHRUNGSKIT	KIT GUIDA BRACCIO
146	HN81091		SEQUENTIAL TRIP KIT	KIT DE DÉCLENCHEMENT SÉQUENTIEL	KIT DE DISPARO SECUENCIAL	KIT FÜR FORTLAUFENDE AUSLÖSUNG	KIT DI ATTIVAZIONE IN SEQUENZA
147	HN81090		O-RING KIT	KIT DE JOINT TORIQUE	KIT DE JUNTA TÓRICA	O-RING-KIT	KIT GUARNIZIONE CIRCOLARE
148	HN81309		TRIGGER VALVE KIT	KIT DE MANŒUVRE DU DÉCLENCHEUR	KIT DE VÁLVULA DEL DISPARADOR	AUSLÖSEVENTIL-KIT	KIT VALVOLA GRILLETTO
149	TA81014		STEP PIN KIT ASSY	ASSEMBLAGE KIT DU BOULON À GRADINS	KIT DE PERNO ESCALONADO	STUFENBOLZEN-KIT-BAUGRUPPE	GRUPPO KIT PERNO SCALARE
154	HN10100	Steel	CONTACT LEVER	LEVIER À CONTACT	PALANCA DE CONTACTO	KONTAKTHEBEL	LEVA DI CONTATTO
155	KK33300	Steel	TORSION SPRING 3300	RESSORT DE TORSION 3300	MUELLE DE TORSIÓN 3300	TORSIONSFEDER 3300	MOLLA DI TORSIONE 3300
156	HN10403	Polyacetal	TRIGGER	DÉCLENCHEUR	DISPARADOR	AUSLÖSER	GRILLETTO
157	HN11420	Steel	ARM GUIDE PIN	GOUPILLE DU GUIDE DU BRAS	PERNO DE GUÍA DEL BRAZO	ARMFÜHRUNGSSTIFT	PERNO GUIDA BRACCIO
158	HN11418	Nylon	ARM GUIDE	GUIDE DU BRAS	GUÍA DEL BRAZO	ARMFÜHRUNG	GUIDA BRACCIO
159	HN10357	Rubber	CONTACT BUMPER	AMORTISSEUR DE CONTACT	AMORTIGUADOR DE CONTACTO	KONTAKTSTOSSFÄNGER	AMMORTIZZATORE CONTATTO
160	HN10401	Steel	CONTACT ARM A	BRAS DE CONTACT A	BRAZO DE CONTACTO "A"	KONTAKTARM A	BRACCIO DI CONTATTO "A"
161	HN12632	Polyethylene terephthalate	WARNING LABEL 2	ÉTIQUETTE D'AVERTISSEMENT 2	ETIQUETA DE ADVERTENCIA 2	WARNSCHILD 2	TARGHETTA DI AVVERTENZA 2







# HN65, HN65J, HN90F

## EC DECLARATION OF CONFORMITY

We hereby declare that the product titled in this instruction manual conforms to the essential health and safety requirements of EC Directives as below.

Directive	: Machinery Directive 2006/42/EC
Manufacturer	: MAX CO., LTD. 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPAN
This product has been evaluated for conformity with the above directives using the following standards.	
Machinery Directive	: EN ISO 12100 : 2010 EN792-13 :2000+A1 :2008 ISO11148-13
Title	: Environment and Quality Assurance Dept. General Manager, MAX CO.,LTD.
Address	: 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPAN
Authorized complier	: MAX.EUROPE BV/President in the community Camerastraat 19,1322 BB Almere, The Netherlands

## DÉCLARATION DE CONFORMITÉ CE

Nous déclarons par la présente que le produit du titre de ce manuel d' instructions est conforme aux exigences essentielles de santé et de sécurité des Directives CE décrites ci-dessous.

Directive	: Directive de Mécanique 2006/42/CE
Fabricant	: MAX CO., LTD. 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPON

Ce produit a été évalué quant à sa conformité avec les directives ci-dessus selon les normes suivantes.

Directive de Mécanique :	EN ISO 12100 : 2010 EN792-13 :2000+A1 :2008 ISO11148-13
Titre	: Directeur général du service Assurance qualité et environnement, MAX CO.,LTD.
Adresse	: 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPON
Agent de conformité agréé	: MAXEUROPE BV/Président dans la communauté Camérastraat 19, 1322 BB Almere, Pays-Bas

## DECLARACIÓN EC DE CONFORMIDAD

Por este medio declaramos que el producto mencionado en este manual de instrucciones se encuentra en conformidad con los requerimientos de salud y de seguridad esenciales de las Directivas CE.

Directiva	: Directiva sobre Maquinaria 2006/42/CE
Fabricante	: MAX CO., LTD. 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPÓN

Este producto ha sido evaluado en conformidad con las directivas anteriores mencionadas utilizando las normas siguientes.

Directiva sobre maquinaria	: EN ISO 12100 : 2010 EN792-13 :2000+A1 :2008 ISO11148-13
Título	: Director General del Departamento de Control de Calidad y Medio Ambiente, MAX CO., LTD.
Dirección	: 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPÓN
Complir autorizado	: MAX.EUROPE BV/Presidente de la comunidad Camerastraat 19,1322 BB Almere, Países Bajos

## EG-KONFORMITÄTSERKLÄRUNG

Wir erklären hiermit, dass das in dieser Bedienungsanleitung beschriebene Produkt mit den maßgeblichen Gesundheits- und Sicherheitsvorschriften der EG-Richtlinien konform ist, wie nachstehend beschrieben.

Richtlinie	: Maschinenrichtlinie 2006/42/EG
Hersteller	: MAX CO., LTD. 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPON

Dieses Produkt wurde auf seine Konformität mit den oben genannten Richtlinien unter Verwendung der folgenden Standards überprüft.

Maschinenrichtlinie	: EN ISO 12100 : 2010 EN792-13 :2000+A1 :2008 ISO11148-13
Position	: Geschäftsführer, Abteilung für Umwelt und Qualitätssicherung, MAX CO.,LTD.
Adresse	: 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 JAPON
Autorisierter Entsorger	: MAX.EUROPE BV/Präsident in der Gemeinschaft Camerastraat 19, 1322 BB Almere, Niederlande

## DICHIARAZIONE DI CONFORMITÀ CE

Si dichiara qui che il prodotto riferito in questo manuale di istruzioni risulta conforme ai requisiti di base concernenti la salute e la sicurezza, espressi dalle direttive CE, come riportato di seguito.

Direttiva	: Direttiva Macchine 2006/42/CE
Produttore	: MAX CO., LTD. 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 GIAPPONE

Questo prodotto è stato valutato per la conformità alle direttive indicate sopra utilizzando gli standard seguenti.

Direttiva Macchine	: EN ISO 12100 : 2010 EN792-13 :2000+A1 :2008 ISO11148-13
Titolo	: Direttore generale, Reparto controllo qualità, MAX CO.,LTD.
Indirizzo	: 1848, Kawai, Tamamura-machi, Sawa-gun, Gunma, 370-1117 GIAPPONE
Sede in Europa	: MAX.EUROPE BV/Presidente della società MAX.EUROPE Camerstraat 19, 1322 BB Almere, Olanda

- The content of this manual might be changed without notice for improvement.
- Le contenu de ce manuel est sujet à modification sans préavis à des fins d'amélioration.
- El contenido de este manual puede ser cambiado sin noticia previa para mejoramiento.
- Änderungen der Betriebsanleitung zum Zwecke der Verbesserung ohne Ankündigung vorbehalten.
- I contenuti di questo manuale possono essere cambiati senza preavviso per motivi di miglioramento del prodotto.



### **MAX EUROPE B.V.**

Camerastraat 19  
1322 BB Almere The Netherlands  
Phone: +31-36-546-9669  
FAX: +31-36-536-3985

### **MAX USA CORP.**

257 East 2nd Street  
Mineola, NY 11501, U.S.A.  
TEL: 1-800-223-4293  
FAX: (516)741-3272

**[www.max-europe.com](http://www.max-europe.com) (EUROPE Site)**

**[www.maxusacorp.com](http://www.maxusacorp.com) (USA Site)**

**[wis.max-ltd.co.jp/int/](http://wis.max-ltd.co.jp/int/) (GLOBAL Site)**



4100779  
170818-00/01